





D37

Real time mode (second indicator running)

To display the *date*, press START while in real time mode.

TIME SETTING

While in real time mode, press MODE 3 times to launch the time setting mode (second indicator flashing). Adjust the flashing item by pressing START. Press RESET to select other items. Holding down START changes the number at high speed. When finished setting, press MODE to return to real time mode.

While adjusting the hour, choose "A" / "P" for 12-hour (AM/PM) indication, or "H" for 24-hour indication.

STOPWATCH

While in real time mode, press MODE once to launch the stopwatch mode.

Press START for starting/stopping the stopwatch. Press RESET to clear the stopwatch to all zeros.

ALARM

While in real time mode, press MODE twice to launch the alarm setting mode (hour indicator flashing).

Adjust the hour by pressing START. Press RESET to select the minute and START to adjust it. Holding down START changes the number at high speed. When finished setting the alarm, press MODE to return to real time mode.

Important: Besides setting the alarm time, it should be





switched on in order to beep. Switch the **alarm** (**(()**)) function on/off by pressing RESET and START together while in real time mode.

When the alarm beeps, press RESET to stop it, or press START to activate the **snooze** function for the alarm to beep again in 5 minutes.

While in real time mode, the alarm time can be displayed by pressing RESET.

HOURLY CHIME (SIGNAL)

To switch the hourly chime function on/off, while in real time mode, press RESET and MODE together.